



Stores: ChelinoBaby - Ormonde - JHB

ChelinoBaby - Fourways - JHB

ChelinoBaby - Menlyn - Pretoria

ChelinoBaby - Gateway - Durban

ChelinoBaby - Online - www.chelinobaby.co.za



Importer:

Anchor International

Add: 12 Kimberlite Road, Theta Ext 5 Booysens Reserve,

JHB 2091 South Africa.

Tel: +2711 835 2520

Info: info@chelinoplatinum.co.za



LUNAR

JAFIM IMPORTS CC T/A ANCHOR INTERNATIONAL NO.12 KIMBERLITE ROAD, THETA EXT5, BOOYSENS RESERVE, JOHANNESBURG 2091, SOUTH AFRICA +2711 835 2520



To ensure that your stroller is used in accordance with these instructions, please read them fully. This stroller conforms to EN1888-1:2018

Your child's safety may be affected if you do not follow these instructions.

- WARNING-Never leave the child unattended.
- WARNING-Ensure that all the locking devices are engaged before use.
- WARNING-This seat unit is not suitable for children under 6 months.
- WARNING-This stroller is intended to carry one children from 6 months up to a maximum weight of 15kgs.
- WARNING-To avoid injury ensure that the child is kept away when unfolding and folding this product.
- WARNING -Do not let the child play with this product
- WARNING -Always use the restraint system
- WARNING -This product is not suitable for running or skating.
- The brakes need to be secured when placing and removing the child from the pushchair
- The maximum weight to be used in the basket is 3 Kg.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the pushchair will affect the stability of the pushchair.
- Accessories which are not approved by the manufacturer shall not be used.
- Only replacement parts supplied or recommended by the manufacturer / distributor shall be used.

ROUTINE CARE & MINTNANCE

- -For cleaning , use only a mild detergent and warm water
- -DO NOT USE BLEACH
- -DO NOT USE any abrasive substances
- -From time to time, check your stroller for loose screws, worn parts, torn material or stitching.
 Replace or adjust the parts as needed


Due to variation on the styles and designs of our products, the photographs and illustrations shown in this manual are generic. Therefore products fabric, colour and design may vary from images shown. Chelino reserves the right to alter products specifications.

2

SAFETY HINTS \ INSTRUCTIONS OF USE \ WARRANTY & GAURANTEE GUIDELINES

- 1. Please read this User Guide thoroughly before using this product. If you are not sure on any point in this guide please consult with the sale person whom sold you this product or contact Chelino on 0118352520. Our offices hours are Monday to Thursday from 9:00 am to 13:00 pm 14:00 pm to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Pub holidays and for three weeks during the December/ January festive season. We are situated at 12 Kimberlite Road, Theta Ext, Booysens Re: 2091, Johannesburg, Gauteng, RSA.
- To avoid suffocation or swallowing or any other illness, please keep all packaging which have been removed from parts wrapped in the bo away from infants, toddlers, children or any other living being. Please carefully dispose of the unwanted packaging once this product is fully assembled and you are satisfied with your purchase.
- Please make sure that you are entirely satisfied with your purchase before removing the warning card attached to this product and before this product. Once the warning card has been removed and if this product has been used we will not accept the return of this product.
- 4. If you are not entirely satisfied with this product purchased, please disassemble this product and re-pack it in the original packaging and relit to the store you purchased if from together with the proof of purchase. Depending on the stores policy, you will either be entitled to a replacement product, a credit youcher or a refund. This depends on the stores policies.
- 5. If you are not entirely satisfied with the assemble of this product or if you are not 100% sure that you have assembled this product correct please take this product back to the store you purchased it from and request for some assistance in checking if the assembly is correct or get product assembled. Depending on the store's policy, there could be an extra charge for this service. Chelino will not take any responsibility if product is incorrectly assembled thus causing any sort of injury to the user or the child. Alternatively you can contact Chelino directly on 0118352520, our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 to 16:30 pm and Fridays from 9:00 am to 12:00 and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ Januar festive season. There is a charge for the assembly of any product. If you require a Chelino representative to assemble this product you will his bring this product to our offices which are situated at 12 Kimberlite Road, Theta Ext. Booysens Reserve, 2091, Johannesburg, Gauteng, RSA
- 6. Please note, that any repair which will needs to be made to this product must be done at the Chelino workshop which is situated at 12 Kimbertite Road. Theta Ext, Booysers Reserve, 2091, Johannesburg, Gauteng, RSA, Our offices hours are Monday to Thursday from 9:00 a 13:00 pm and 14:00 pm to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. We do not provide any loan/courtesy products wyour product has been sent in for repairs. Chelino requires 7 working days to repair any product, but this lead time may vary depending on the transportation of the product too and from yourself. Once the warranty card is detached from this product and once this product is used even used once and if there is a fault, this product will need to be sent to the Chelino Workshop for the repair and no refund/credifexchange will be allowed. Only a Chelino representative can decide whether the product needs to be replaced/credited/exchanged.
- Once you are satisfied with the assembly of this product and have read this instruction and agree to the terms stated and are ready to use product, please ensure that all safety locks are engaged to ensure safe use of this product.
- Please ensure that the child is always securely strapped into this product at all times. The seat belts must be properly adjusted to keep the child secured. If the seat belt is too loose the child could fall out thus causing injury. If the seat belts are too tight it will cause injury and aggravation to the child.
- Never leave the child unattended or without parentiguardian supervision while in this product, as injury could be caused by other parties intentionally or unintentionally. This product can be knocked over and the child can be injured.
- 10. Never lift this product while the child is in it. This can cause this product to fold and thus causing injury to the child seated in this product. When confronted with a staircase, no matter how many steps there are, please use the alternatives such as an elevator-lift or ramp or remove child from this product before using the staircase.
- 11. Never allow the child to stand on the seat of this product. This can cause this product to fold and thus causing injury to the child. The chil also fall out of this product causing injury to him/herself. This can also cause damage to structure of this product.
- 12. This product is designed for the use of only one child. This product cannot accommodate more than one child
- 13. Always engage the brake when you are not using this product. Please note, by applying the brake one still cannot leave the child unattended and without parent supervision. If the brake is not engaged properly the product will move.
- 14. Take special care when adjusting the backrest if the child is seated in this product. It is preferred to select the desired backrest position be seating the child this product.
- 15. Prevent and do not allow any child to climb into this product or hang onto the handle bars or any other part of this product. This imbalance weight can cause this product to topple thus causing injury.
- 16. Do not hang or place any diaper bag or shopping bags or any other item over the handle bars or canopy of this product. This weight can cause damage to this product and also cause this product to fold or topple.
- 17. Storage trays/storage compartments/cup holders are there for convenience and are not suitable for holding large amounts of liquids (hot cold) or heavy objects. These areas are also not waterproof or leak proof and spillage can occur.
- 18. The storage basket situated underneath the seat can hold a maximum weight of 2.5kgs. Do not place any items heavy than 2.5kgs and i which do not fit in this basket as this will hamper the performance of this product.
- 19. This product is fit to carry a child weighing no more than 18kgs.
- 20. This product was designed to be used on smooth surfaces and in average weather climates. Do not use this product on rough terrains as uneven surfaces and in extreme weather conditions. Using this product in the undesired terrains and weather conditions can cause serious damage to this product and to your child
- Chelino takes no responsibility and will not be held liable for any damage or injury caused by using this product or if this product is used any other purposes other than its intended purpose.
- 22. Please note, there are no warranties or guarantee on any fabrics or sponge grip handles used on this product.

Dimension info

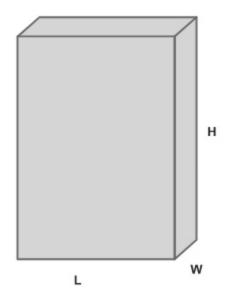

CARTON LENGTH	53 CM		
CARTON WIDTH	46 CM		
CARTON HEIGHT	85 CM		

Included parts

Included Parts -

- 1. Stroller Chassis
- 2. Front Wheels (x2)
- 3. Rear Wheels (x2)
- 4. Combination Seat (x1)







_Seat unit orientations



Forward facing



Rearrward facing

Assembly

 Open the stroller chassis: the chassis is employed with an internal auto fold lock. Just lift up the handle to unfold the chassis.





 Attach the front wheels: Slide mounting pins, into the housing on the bottom, front wheel housing until they lock into place.

To remove the front wheels, push the release button, located on the top of the front wheel housing. Then slide the front wheel out.

ATTENTION: make sure the wheels are properly attached by lightly tugging on the wheel.





Dimension info



CARRY COT WEIGHT	3.71 KGS	CAR SEAT WEIGHT	3.5 KGS
CARRY COT HEIGHT	59 CM	CAR SEAT HEIGHT	56 CM
CARRY COT WIDTH	44.5 CM	CAR SEAT WIDTH	44.2 CM
CARRY COT LENGTH	81 CM	CAR SEAT LENGTH	70 CM

Dimension info



LENGTH	78.5 CM	FOLDED LENGTH	38 CM
WIDTH	58 CM	FOLDED WIDTH	58 CM
HEIGHT	114 CM	FOLDED HEIGHT	77 CM

Assembly

3 · Attach the rear wheels: Line up the wheel axle with the hole on the rear wheel housing, and slide it in all the way. Make sure the wheel is locked in by trying to pull the wheel out slightly. To remove the rear wheels, pull the silver release tab (which is on the inside of the rear wheel housing) down, and slide the wheel out.





4 · Attach the seat: Align the connectors on each side of the stroller seat above the recline posts. Once aligned, simultaneously push the connectors onto the recline posts until hear a "click" from both sides.

WARNING: Please make sure that both sides have been attached properly. Try lifting the seat off the chassis. If either side moves, you need to push down until you hear a "click".



Detaching the Seat: On each side of the seat, you will see on the fabric a marked circle, underneath is a lever. Lift both release levers on the seat locking latch at the same time, Lift upward.

IMPORTANT: Always remove child before detaching the seat.

12.73 KGS

WEIGHT

5. Recline the seat: To recline the seat ift up the buttons on the back side of the stroller seat, and position the seat at the desired angle. There are 3 positions for the seat, fully reclined, fully upright, and a middle position.





6. Attach the canopy: Slide the canopy mouldings (as shown by the arrow) into the frame mouldings until they lock together.



Installing carry cot

 Align and insert the carry cot adaptors to the plastic receivers on the middle of the stroller. Slightly lift up to ensure lock tight.

> To remove the carry cot, pull the tabs on both sides of the carry cot adaptors and lift up the carry cot.

Wanring: Make sure to hold the carry cot firm and balance while installing or removing the carry cot.





Installing car seat

 Align and insert the car seat adaptors to the plastic receivers on the middle of the stroller. Slightly lift up to ensure lock tight.

To remove the car seat, pull the tabs on both sides of the car seat adaptors and lift up the car seat.


Wanring: Make sure to hold the car seat firm and balance while installing or removing the car seat.





Using the stroller

7. Remove the canopy: Unzip the canopy, slide the canopy mouldings(as shown by the arrow) out of the frame mouldings

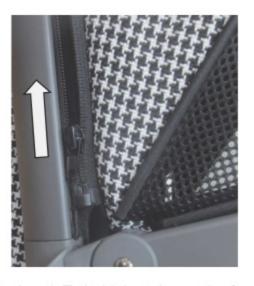

 Adjust the hood: To hold the tube on the front of the hood, pull the hood forward or backward to adjust the angle as shown.
 Pull the extra sun visor out or tack inside.





 Attach the bumper bar: Slide the pins into the mounts on the seat until they lock into place.
 Removing: push the release button on the bottom of the mounts and pull bumper bar up.





Raise the footrest: Pull the footrest tube.
 Lower the footrest: Press buttons on both sides of the leg rest hinge and hold while lowering the footrest to the desired position.





Folding the stroller

16. Folding the stroller: Pull up the footrest of the seat unit. Grasp the handle at the middle of the chassis (which is underneath the seat unit), use thumb finger to press the 2nd lock and turn the handle upward to release the fold lock. At the same time lifting up the chassis to allow the chassis to collapse down.

It is recommended to remove the seat unit before folding the chassis.

Warning: Always apply brake and remove children before folding the stroller.













- 8

The stroller seat has 3 harness slots at different heights to accommodate the child. The shoulder straps must be positioned near the child's shoulders. To change the shoulder harness height, unclip the shoulder harness straps from the waist harness straps and push the shoulder harness tongue out of the current harness slot and through the back of the seat pad and then pull the shoulder harness buckle tongue through the desired slot. Clip the shoulder harness straps and waist straps back together.

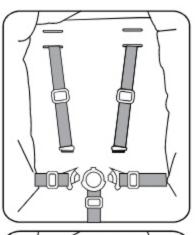

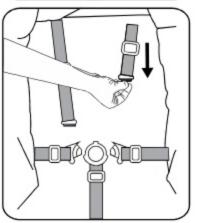

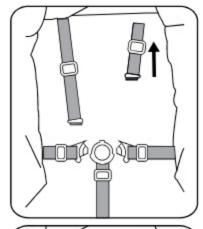

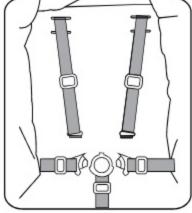

Using the stroller

11. Handle adjustment: Press and hold the center release button on the handle while raising or lowering the handle to the desired position.



12. Swivel wheels: Lift the tab on the front of the wheel housing up to make the wheel lock and down to make the wheel swivel. The front wheel is allowed to be 360 degrees rotated horizontally.



13. Open the side windows / extension panel: unzip the window and push the fabric panel forward.







14. To apply the brake: step down on the brake pedal and slightly push the stroller to ensure the wheels are locked tight.

To release the brake: kick forward on the upper part of the brake pedal.

10





Using the stroller

15. To secure your child in the harness

WARNING: USE THE HARNESS AT ALL TIMES.

A A five point harness is provided to restrain your child.

To secure your child in the harness please follow the steps below carefully.

insert the 2

waist strap tongues(A+B) into the center crotch strap buckle(C) from the right and left.

Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child.

To remove the child, release the buckle by squeezing the center button of the crotch strap buckle, remove the shoulder straps and lift the child out of the stroller.

