

BEBECOO

BEBECOO

**EGG STROLLER
INSTRUCTION MANUAL**



**EGG STROLLER
INSTRUCTION MANUAL**

Important Note:

Please reading this instruction cardfully and keep it properly before using it.
Failure to follow this instruction may affect the safety of children.

Warning:

Avoid casualties:

- when the child is using, the caregiver should not leave.
- when the child is riding in prams, the seat belts must be used.
- Don't carry another baby or bag in this stroller.
- Before using must ensure that all locking devices are in place.
- Use the straps, belts and shoulder straps of the seat belt.
- Remove the straps from the straps when they are not in use.
- Do not let the child come near while expanding or folding your stroller.
- The child should be clear of moving the stroller while making adjustments.
- Don't allow the children to play with this products.
- This stroller is for children aged 0-36 months, the maximum load is 15kg.
- No more than 3kg items can be placed in the basket.
- The hard seat mode is not suitable for children under 6 months of age. It is not suitable for children under 6 months of age when the cart is in seat state or the backrest Angle is less than 150 degrees.
- No mat thicker than 20mm shall be used in the sleeping basket.
- Non-manufacturer supplied attachments are prohibited.
- Hanging items on handlebars or over load can destabilized baby strollers.
- This product is not suitable for running or skating and is limited to flat ground without dangerous obstacles.

- when folding, make sure the baby strollers are stored in a location that does not pose a risk of injury to the child.
- Please keep the baby strollers away from open flame, exposed flame, heaters or other strong user heat sources.
- This vehicle requires regular maintenance by the periodically, check the tightening device is operating normally without any loss.
eg: after a crash ...

Baby stroller is operated according to GB14748-2006 standard.

Use card and maintenance

- Please use a non-toxic, non-corrosive cleaner to clean your pram.
- Wipe the frame with a damp cloth. Don't use cleanser or solution.
- The fabric part can be machine washed, don't use the irritant strong detergent or bleach. (the highest temperature: 30°C)
- Circulate air around the cart and do not stack anything on the cart.
- Use a rainproof cover when it rains. First to dry the cart before folding and storing.

1. Installation

1 unfolding the frame

Push with both hands, and then lifting up. A healthy click or snapping sound do it.



3 the front wheels installation

Holding down the button, it can be dismantled.



2 the rear wheels installation

Holding down the button, it can be dismantled.



4 lock front universal wheels

As the pictures, press the button to lock, pulling up is universal mode.



5 the carrycot installation

As shown, press and hold the button with both hands, insert both of the socket. Remove the sleeping basket, press the button and lifting.




6 the armrest installation

Plug into socket as shown. Remove the armrest, press the button and lifting.



7 carrying basket installation

As the pictures, attach both ends the basket onto the frame, covering lid.

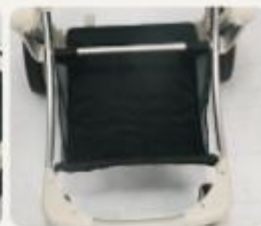

2. Employ

1 safety belt adjustment

Press the middle button to open the 5-point safety belt. Adjust the shoulder strap as shown.



2 sunshade adjustment

As Shown can be directly adjusted in three gears.



3 sleeping basket reversing

Hold down the little protruding buttons on both sides, lifting the carrycot and reversing.



4 sitting angle adjustment

Press and hold down the round button, it can be adjusted sitting, lying and sleeping.



5 the push handle adjustment

Press the round button as shown, it can be adjusting.



6 the break adjustment

Adjust up and down according to the arrow.



7 Close coupling adjustment

After folding the cart, put the gray hook on the fixed place of the frame.




8 folding installation

Both hands pull the gray buttons on both sides, then gently push forward in the folding frame.



closed button

3.Dimension Info

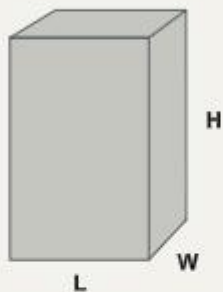

LENGTH	75 CM	CARTON LENGTH	52 CM
WIDTH	66 CM	CARTON WIDTH	30 CM
HEIGHT	103 CM	CARTON HEIGHT	85 CM

WEIGHT	13.5 KGS
--------	----------

4.Note

4.Note

4.Note
