

ChelinoBaby®

Stores: ChelinoBaby – Ormonde – JHB
ChelinoBaby – Fourways – JHB
ChelinoBaby – Woodmead Square – JHB
ChelinoBaby – Greenstone – JHB
ChelinoBaby – Menlyn – Pretoria
ChelinoBaby – Kolonnade – Pretoria
ChelinoBaby – Centurion – Pretoria
ChelinoBaby – Gateway – Durban
ChelinoBaby – Online – www.chelinobaby.co.za



Imported for :

ChelinoBaby Group of Companies.

No. 12 Kimberlite Road , Theta Ext 5 ,

Booyens Reserve , JHB , 2091. SA.

Tel: +2711 8352520

Info: info@chelinoplatinum.co.za

Chelino® PLATINUM



CITY II

CHELINOBABY GROUP OF COMPANIES.
NO. 12 KIMBERLITE ROAD, THETA EXT 5, BOOYSENS RESERVE, JHB, 2091.SA.
Tel: +2711 8352520

www.chelinobaby.co.za



Dear Customer,

Thank you for purchasing a Chicco product. Our products have been designed for your child's safety and comfort. The stroller is an ideal solution for those who value quality, modernity and functionality. The product meets the requirements of safety standard EN 1898:2011. Please read the manual carefully and follow the instructions.

IMPORTANT! Read these instructions to follow with.

WARNING!

Never leave your child unattended.
Before use, ensure the stroller is properly assembled and all safety locks are engaged.
To avoid any injury to your child and any other children, please ensure that there are no in a safe area when opening and closing the stroller.
Do not allow children to play with or on the product.
Before use, check children's feet, the harness, seat or seat belt are properly fastened.
This product is not suitable for driving or towing.
The product is designed to transport one child at a time. The basket can hold a maximum of 2 kg. Any additional load supported from the stroller handles, under the basket or on the sides will cause instability and associated risk.
Use the front suspension when going up a curb or step.
The basket should be folded when the child is placed in or removed out of the stroller. Use only parts and accessories supplied or recommended by the manufacturer. Do not use other parts or accessories.
Do not place the product near open flames or other heat sources.
This product can cause power line overload.
The basket can only be used for a child in a car seat and cannot be used as a stand.
The basket seat can be used as a child carrier and cannot be used as a detachable seat.
The product is only designed for assembly and disassembly of the stroller frame. Do not insert any other objects into the slot at the side of the opening and closing of the stroller.

The following applies to the stroller seat:

WARNING!

The stroller is not suitable for children under 6 months old.
Always use the 2-point safety harness system.
The product is intended for children from 6 months old to 18 kg.

Applies to Chicco City car seat

Chicco City stroller is available also as a set with a compatible Chicco City car seat.
The car seat is intended for children from 6 months to 18 kg.
If the seat is used together with the stroller, it does not replace a cradle or cot. For sleeping, place the child at the back of, inside or out.

1

Due to variation in the style and design of our products, the photographs and illustrations shown in this manual are generic. Therefore product labels, color and design may vary from those shown. Chicco reserves the right to alter product specifications.

Stroller components



- A. Frame
- B. Front wheels
- C. Rear wheels
- D. Rear axle with brake
- E. Safety bar
- F. Seat/Suspension
- G. Sunshade
- H. Safety harness
- I. Foot mat
- J. Car seat adapter

UNFOLDING STROLLER FRAME

2

Place the frame on a flat surface. To unfold, place the foot rest on the telescopic handle and pull the mechanism on both sides (FIG. 1). Lift the handle up (FIG. 2) until the frame and you hear the lock click (FIG. 3). To reset the rear axle with brake (FIG. 4), set the arm in position (FIG. 4) and insert the stop (FIG. 5), and you hear the lock click.



NOTE! After setting the frame in its upright position, the brake lever should be on the side of the frame (fold-inward handle).

WHEEL ASSEMBLY/REASSEMBLY

Insert the front wheels (part A) into the opening in the front of the frame, until you hear the lock click (shown in FIG. 6). To disassemble, push the quick release button (FIG. 6). The stroller has front wheels which may be locked for steering straight ahead. To lock the wheels for forward drive, press the button (FIG. 6) and if both end the wheel will remain in a position to

3

move straight ahead. To unlock the wheels, press the button again.
Insert rear wheels (part C) into the opening in the rear axle, until they lock (they should click) (FIG. 7). To disassemble the rear wheels, press the lock button and pull the wheels out of the opening (FIG. 7).

NOTE! Always use the correct tools to ensure that all the wheels are properly installed.



USE OF BRAKE

The stroller is equipped with a foot brake located on the rear axle. Press the brake pedal down (FIG. 8) in advance. The brake is released after the pedals lifted up (FIG. 9).



4

ASSEMBLY/DISASSEMBLY OF SAFETY AND SAFETY BAR

Place the basket on a flat surface. Press buttons for basket adjustment to unlock the seat (FIG. 12). The basket can be folded using these buttons.



Before inserting the basket into the frame, attach the safety harness to the seat by underneath the basket (FIG. 13) and insert it into (FIG. 14).



When inserting the basket on the stroller frame, place it into the opening (FIG. 15) designed for this purpose on each side of the stroller, until you hear clicking sound.



NOTE! THE BASKET CAN ONLY BE SEPARATED FOLLOWING RECOMMENDATIONS FROM THE PERSON PROVIDING THE SERVICE.
The safety bar should be checked for the correct opening to the basket on each side of the seat frame, until you hear the clicking sound (FIG. 16).

5



ATTACHING THE FOOTREST AND SUNSHADE

Attach the foot rest (part G) using the arrow direction. The rear side of the seat's harness follows the step (FIG. 24) and under the upper part of the seat (FIG. 18). Close the handle on the frame of the sunshade around the lower side of the seat (FIG. 19). Close the handle on the frame of the sunshade around the upper side of the seat (FIG. 20). The sunshade may be extended to cover a larger part of the basket and seat. For this purpose, open the zipper located on the outer side of the sunshade (FIG. 21) and unfold the sunshade.

NOTE! Correctly attached footrest with attached basket is shown in FIG. 18.



6



CONVERTING THE BASKET INTO THE SEAT

In order to convert the basket function into the stroller, remove the basket part from the frame. The frame together the two clamps under the seat (FIG. 27) and (FIG. 28) and mount the seat again on the frame. Next, adjust the seatrest to the seating position, using the strap behind the backrest (FIG. 21).



 
The seat has 4 adjustable legs, 2 a reclining seat setting - they are adjusted by a lever that is located in the seat frame (FIG. 22) and a strap behind the backrest.

7



SAFETY HARNESSES


Press the button to open the clamp (FIG. 23A). To secure the child, connect the harness of the seat and the stroller straps and then insert them into the middle clamp (FIG. 23B) until it engages. Adjust the safety harness with the size buckle (FIG. 23C) to properly secure the child.
Lock all harness straps into the buckle, and cover the harness with the cover, following the harness for cleaning. Remove the water-repellent screen.



ADJUSTABLE SEAT-ADJUSTING FUNCTION AND TELESCOPIC HANDLE
The stroller has a two-stage adjustable seat-adjusting function. The adjustment lever, as located on the bottom side of the rear axle with buckle, next to the basket (FIG. 25), for reclining or raising the seat, pull firmly the lever toward the rear axle, until it locks (FIG. 26). In this position, the shock absorbers will contain all the pressure for driving on flat surfaces freely pull

8

 the button in the opposite direction until it engages (FIG.27). In this position the shock absorbers will provide greater stability.

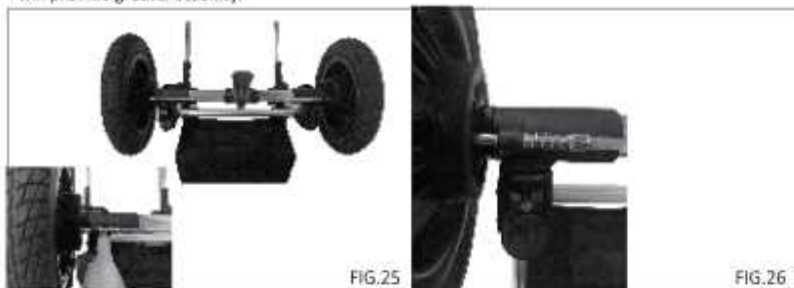

ASSEMBLING THE CAR SEAT ON THE STROLLER FRAME

The supplied adaptor is compatible with the Chelino City car seat.

Place adaptors in the opening on both sides of the seat until you hear the lock clicks. (FIG.28).When installing the car seat on the stroller frame, push in into the openings on each side of the frame, until you hear clicking sound of engaged lock (FIG.29). To remove the seat from the frame, pull the lever of the adapters on both sides of the stroller (FIG.30) and remove the seat.



NOTE! The seat must be always installed on the frame with child's back to the direction of travel (the child should face the person pushing the stroller) (FIG.31).



To remove the adapters push the grey buttons on both sides of the seat(FIG.32).



FOLDING THE STROLLER

Adjust the handle to the lowest position and remove the seat / bassinet from the frame (FIG.33). Press the lock button, pull on both sides (FIG.34) and fold the handle (FIG.35). Hold the central

belt for carrying the frame and lift the frame upward (FIG.36). The frame should fold automatically (FIG.37).



FIG.33

FIG.34



FIG.35

FIG.36

NOTE! Do not folding the stroller without removing the bassinet/seat/car seat first (FIG.38A and 38B).



FIG.37

FIG.38A



FIG.38B

CARE AND MAINTENANCE

The user is responsible for proper installation of all functional elements as well as for carrying out all required maintenance and adjustments in order to keep the stroller in good technical condition.

The stroller must be periodically checked for potential problems. Significant measures to be applied to ensure the child's safety and prevent shortening of the product life have been presented below:

Check the strength and safety of all rivets and connections.

Check all wheel locking equipment and tires. If necessary, replace or repair.

Check if all safety devices work properly, particularly the main and additional fasteners that should move freely at any time.

Please, stop using the stroller if these are doubts as to its proper use or a suspicion of any danger.

If the wheels squeak, apply a thin layer of silicone. Do not use oil or grease-based products as they attract dirt, which makes stroller movement difficult.

CLEANING

If the elements of the stroller chassis have been exposed to saltwater, rinse with tap water as soon as possible.



Do not wash. Clean the product gently with a damp cloth and a mild detergent.



Wash at max.30°C, gentle process.



Do not bleach



Do not dry in a tumble dryer



Do not iron



Do not dry clean

Do not fold or store the product when it is wet and never store it in wet conditions, as it can lead to mold growth.

SAFETY HINTS \ INSTRUCTIONS OF USE \ WARRANTY &

GAURANTEE GUIDELINES

1. Please read this User Guide thoroughly before using this product. If you are not sure on any point in this guide please consult with the sales person whom sold you this product or contact Chelino on 0118352520. Our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 pm to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. We are situated at 12 Kimberlite Road, Theta Ext, Booysens Reserve, 2091, Johannesburg, Gauteng, RSA.
2. To avoid suffocation or swallowing or any other illness, please keep all packaging which have been removed from parts wrapped in the box away from infants, toddlers, children or any other living being. Please carefully dispose of the unwanted packaging once this product is fully assembled and you are satisfied with your purchase.
3. Please make sure that you are entirely satisfied with your purchase before removing the warning card attached to this product and before using this product. Once the warning card has been removed and if this product has been used we will not accept the return of this product.
4. If you are not entirely satisfied with this product purchased, please disassemble this product and re-pack it in the original packaging and return it to the store you purchased it from together with the proof of purchase. Depending on the stores policy, you will either be entitled to a replacement product, a credit voucher or a refund. This depends on the stores policies.
5. If you are not entirely satisfied with the assemble of this product or if you are not 100% sure that you have assembled this product correctly, please take this product back to the store you purchased it from and request for some assistance in checking if the assembly is correct or get this product assembled. Depending on the store's policy, there could be an extra charge for this service. Chelino will not take any responsibility if this product is incorrectly assembled thus causing any sort of injury to the user or the child. Alternatively you can contact Chelino directly on 0118352520, our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. There is a charge for the assembly of any product. If you require a Chelino representative to assemble this product you will have to bring this product to our offices which are

- situated at 12 Kimberlite Road, Theta Ext, Booysens Reserve, 2091, Johannesburg, Gauteng, RSA.
6. Please note, that any repair which will needs to be made to this product must be done at the Chelino workshop which is situated at 12 Kimberlite Road, Theta Ext, Booysens Reserve, 2091, Johannesburg, Gauteng, RSA. Our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 pm to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. We do not provide any loan\courtesy products while your product has been sent in for repairs. Chelino requires 7 working days to repair any product, but this lead time may vary depending on the transportation of the product too and from yourself. Once the warranty card is detached from this product and once this product is used even if used once and if there is a fault, this product will need to be sent to the Chelino Workshop for the repair and no refund\credit\exchange will be allowed. Only a Chelino representative can decide whether the product needs to be replaced\credited\exchanged.
 7. Once you are satisfied with the assembly of this product and have read this instruction and agree to the terms stated and are ready to use this product, please ensure that all safety locks are engaged to ensure safe use of this product.
 8. Please ensure that the child is always securely strapped into this product at all times. The seat belts must be properly adjusted to keep the child secured. If the seat belt is too loose the child could fall out thus causing injury. If the seat belts are too tight it will cause injury and aggravation to the child.
 9. Never leave the child unattended or without parent\guardian supervision while in this product, as injury could be caused by other parties intentionally or unintentionally. This product can be knocked over and the child can be injured.
 10. Never lift this product while the child is in it. This can cause this product to fold and thus causing injury to the child seated in this product. When confronted with a staircase, no matter how many steps there are, please use the alternatives such as an elevator\lift or ramp or remove the child from this product before using the staircase.
 11. Never allow the child to stand on the seat of this product. This can cause this product to fold and thus causing injury to the child. The child can also fall out

of this product causing injury to him\herself. This can also cause damage to structure of this product.


12. This product is designed for the use of only one child. This product cannot accommodate more than one child.
13. Always engage the brake when you are not using this product. Please note, by applying the brake one still cannot leave the child unattended and without parent supervision. If the brake is not engaged properly the product will move.
14. Take special care when adjusting the backrest if the child is seated in this product. It is preferred to select the desired backrest position before seating the child this product.
15. Prevent and do not allow any child to climb into this product or hang onto the handle bars or any other part of this product. This imbalance of weight can cause this product to topple thus causing injury.
16. Do not hang or place any diaper bag or shopping bags or any other item over the handle bars or canopy of this product. This weight can cause damage to this product and also cause this product to fold or topple.
17. Storage trays\storage compartments\cup holders are there for convenience and are not suitable for holding large amounts of liquids (hot or cold) or heavy objects. These areas are also not waterproof or leak proof and spillage can occur.
18. The storage basket situated underneath the seat can hold a maximum weight of 2.0kgs. Do not place any items heavy than 2.0 kgs and items which do not fit in this basket as this will hamper the performance of this product.
19. This product is fit to carry a child weighing no more than 18 kgs.
20. This product was designed to be used on smooth surfaces and in average weather climates. Do not use this product on rough terrains and uneven surfaces and in extreme weather conditions. Using this product in the undesired terrains and weather conditions can cause serious damage to this product and to your child.
21. Chelino takes no responsibility and will not be held liable for any damage or injury caused by using this product or if this product is used for any other purposes other than its intended purpose.
22. Please note, there are no warranties or guarantee on any fabrics or sponge grip handles used on this product.

DIMENSION INFO



LENGTH	90 CM	FOLDABLE LENGTH	68 CM
WIDTH	60 CM	FOLDABLE WIDTH	60 CM
HEIGHT	106 CM	FOLDABLE HEIGHT	68 CM

 WEIGHT 14.34 KGS

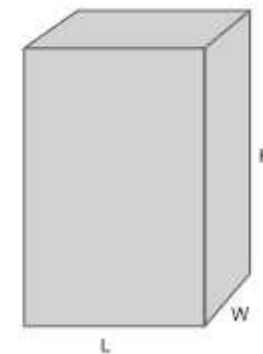

CARTON LENGTH	50 CM
CARTON WIDTH	32 CM
CARTON HEIGHT	77.5 CM