

SAFETY HINTS \ INSTRUCTIONS OF USE \ WARRANTY & GAURANTEE GUIDELINES

1. Please read this User Guide thoroughly before using this product. If you are not sure on any point in this guide please consult with the sales person whom sold you this product or contact Chelino on 0118352520. Our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 pm to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. We are situated at 12 Kimberlite Road, Theta Ext, Booyens Reserve, 2091, Johannesburg, Gauteng, RSA.

2. To avoid suffocation or swallowing or any other illness, please keep all packaging which have been removed from parts wrapped in the box away from infants, toddlers, children or any other living being. Please carefully dispose of the unwanted packaging once this product is fully assembled and you are satisfied with your purchase.

3. Please make sure that you are entirely satisfied with your purchase before removing the warning card attached to this product and before using this product. Once the warning card has been removed and if this product has been used we will not accept the return of this product.

4. If you are not entirely satisfied with this product purchased, please disassemble this product and re-pack it in the original packaging and return it to the store you purchased it from together with the proof of purchase. Depending on the stores policy, you will either be entitled to a replacement product, a credit voucher or a refund. This depends on the stores policies.

5. If you are not entirely satisfied with the assemble of this product or if you are not 100% sure that you have assembled this product correctly, please take this product back to the store you purchased it from and request for some assistance in checking if the assembly is correct or get this product assembled. Depending on the store's policy, there could be an extra charge for this service. Chelino will not take any responsibility if this product is incorrectly assembled thus causing any sort of injury to the user or the child. Alternatively you can contact Chelino directly on 0118352520, our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. There is a charge for the assembly of any product. If you require a Chelino representative to assemble this product you will have to bring this product to our offices which are situated at 12 Kimberlite Road, Theta Ext, Booyens Reserve, 2091, Johannesburg, Gauteng, RSA.

6. Please note, that any repair which will needs to be made to this product must be done at the Chelino workshop which is situated at 12 Kimberlite Road, Theta Ext, Booyens Reserve, 2091, Johannesburg, Gauteng, RSA. Our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 pm to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. We do not provide any loan/courtesy products while your product has been sent in for repairs. Chelino requires 7 working days to repair any product, but this lead time may vary depending on the transportation of the product too and from yourself. Once the warranty card is detached from this product and once this product is used even if used once and if there is a fault, this product will need to be sent to the Chelino Workshop for the repair and no refund/credit/exchange will be allowed. Only a Chelino representative can decide whether the product needs to be replaced/credited/exchanged.

7. Once you are satisfied with the assembly of this product and have read this instruction and agree to the terms stated and are ready to use this product, please ensure that all safety locks are engaged to ensure safe use of this product.

8. Please ensure that the child is always securely strapped into this product at all times. The seat belts must be properly adjusted to keep the child secured. If the seat belt is too loose the child could fall out thus causing injury. If the seat belts are too tight it will cause injury and aggravation to the child.

9. Never leave the child unattended or without parent/guardian supervision while in this product, as injury could be caused by other parties intentionally or unintentionally. This product can be knocked over and the child can be injured.

10. Never lift this product while the child is in it. This can cause this product to fold and thus causing injury to the child seated in this product. When confronted with a staircase, no matter how many steps there are, please use the alternatives such as an elevator/lift or ramp or remove the child from this product before using the staircase.

11. Never allow the child to stand on the seat of this product. This can cause this product to fold and thus causing injury to the child. The child can also fall out of this product causing injury to him/herself. This can also cause damage to structure of this product.

12. This product is designed for the use of only one child. This product cannot accommodate more than one child.

13. Always engage the brake when you are not using this product. Please note, by applying the brake one still cannot leave the child unattended and without parent supervision. If the brake is not engaged properly the product will move.

14. Take special care when adjusting the backrest if the child is seated in this product. It is preferred to select the desired backrest position before seating the child this product.

15. Prevent and do not allow any child to climb into this product or hang onto the handle bars or any other part of this product. This imbalance of weight can cause this product to topple thus causing injury.

16. Do not hang or place any diaper bag or shopping bags or any other item over the handle bars or canopy of this product. This weight can cause damage to this product and also cause this product to fold or topple.

17. Storage trays/storage compartments/cup holders are there for convenience and are not suitable for holding large amounts of liquids (hot or cold) or heavy objects. These areas are also not waterproof or leak proof and spillage can occur.

18. The storage basket situated underneath the seat can hold a maximum weight of 2.5kgs. Do not place any items heavy than 2.5kgs and items which do not fit in this basket as this will hamper the performance of this product.

19. This product is fit to carry a child weighing no more than 18kgs.

20. This product was designed to be used on smooth surfaces and in average weather climates. Do not use this product on rough terrains and uneven surfaces and in extreme weather conditions. Using this product in the undesired terrains and weather conditions can cause serious damage to this product and to your child.

21. Chelino takes no responsibility and will not be held liable for any damage or injury caused by using this product or if this product is used for any other purposes other than its intended purpose.

22. Please note, there are no warranties or guarantee on any fabrics or sponge grip handles used on this product.




LUNAR TWIN

Jafim Imports CC T/A Anchor International
No. 12 Kimberlite Road, Theta Ext 5, Booyens Reserve,
Johannesburg, 2091,
South Africa
+2711 835 2520
www.chelinobaby.co.za



INCLUDED PARTS>>

- 1) Stroller frame
- 2) Canopy hood (x 2)
- 3) Seat (x2)
2 in 1 stroller seat (x2)
- 4) Bumper bar (x2)
- 5) Front wheels (x2)
- 6) Rear wheels (x2)
- 7) Rain cover (x2)
- 8) Rear wheel fenders (x2)
- 9) Raiser(x1)
- 10) Car seat adaptor (x2 sets)
- 11) Instruction Manual

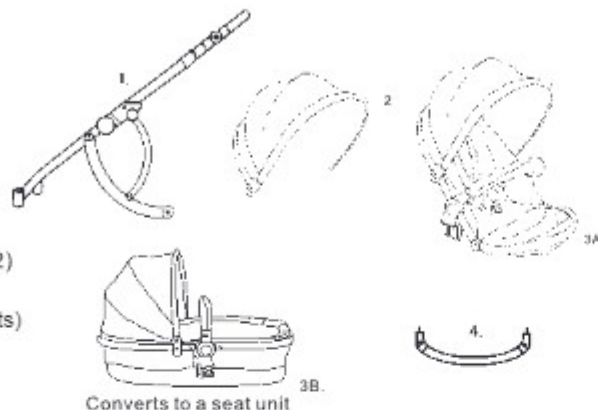


PLEASE NOTE:

The Lunar twin stroller complete with one set of raiser for top seat.

The raisers are used to heighten the main seat to allow extra room to accommodate the second seat.

The raiser is not needed if you are not using the second seat.

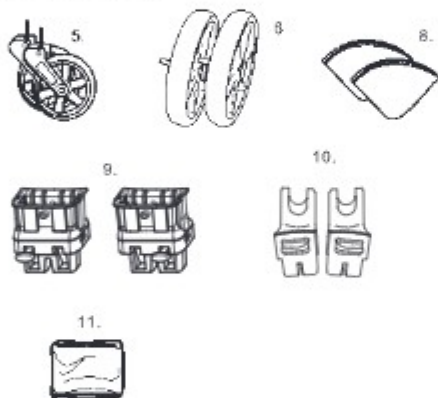

Thank you for choosing Chelino Platinum. To ensure that your stroller is used in accordance with these instructions, please read them fully.

This stroller conforms to EN1888:2012 and is warranty for 12 months from the date of purchase against manufacturing defects.

Your child's safety may be affected if you do not follow these instructions.

- WARNING:** A child's safety is your responsibility
- WARNING:** Ensure that all locking devices are engaged before use
- WARNING:** Children should be harnessed in at all times. Always use the crotch strap in combination with the waist belt
- WARNING:** DO NOT hang shopping bags from the handle as this may affect the stroller's stability. Use the basket provided – maximum weight 2kgs
- WARNING:** This product is not suitable for running or skating. Never run or skate with your stroller, especially across roads
- WARNING:** It may be dangerous to leave your child unattended
- WARNING:** Do not use this product as a bed, your child may become tangled in straps and suffocate
- WARNING:** The child should be clear of moving parts while making adjustments or opening or folding the stroller. Risk of serious injury (entrapment, laceration or amputation) exists

- This stroller requires regular maintenance by the user
- Overloading, incorrect folding and the use of non approved accessories may cause damage or break the stroller
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks, rain covers, etc, other than those approved by the manufacturer or distributor
- Always balance the weight of the stroller evenly
- We advise that your stroller is not stored or left outside at any time
- This stroller is intended to carry TWO CHILDREN from birth upto 18 kgs. A combined weight of upto 36 kgs.

ROUTINE CARE & MAINTENANCE

- For cleaning , use only a mild detergent and warm water
- DO NOT USE BLEACH
- DO NOT USE any abrasive substances
- From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or adjust the parts as needed


Designed by Chelino Baby for Chelino Platinum. For customer care please contact info @chelinoplatinum.co.za

STROLLER CONFIGURATIONS>>



YOUR STROLLER>>


- | | | | |
|----|------------------------|----|--------------------------------|
| A) | Handle | I) | Front wheels |
| B) | Handle height adjuster | J) | Swivel lock |
| C) | Folding trigger | K) | Footrest Adjuster(for BS only) |
| D) | Seat Recline | L) | Bumper bar |
| E) | Second seat bracket | M) | Harness |
| F) | Brake (behind wheel) | N) | Canopy (hood) |
| G) | Rear wheel | O) | Seat frame release |
| H) | Basket | | |

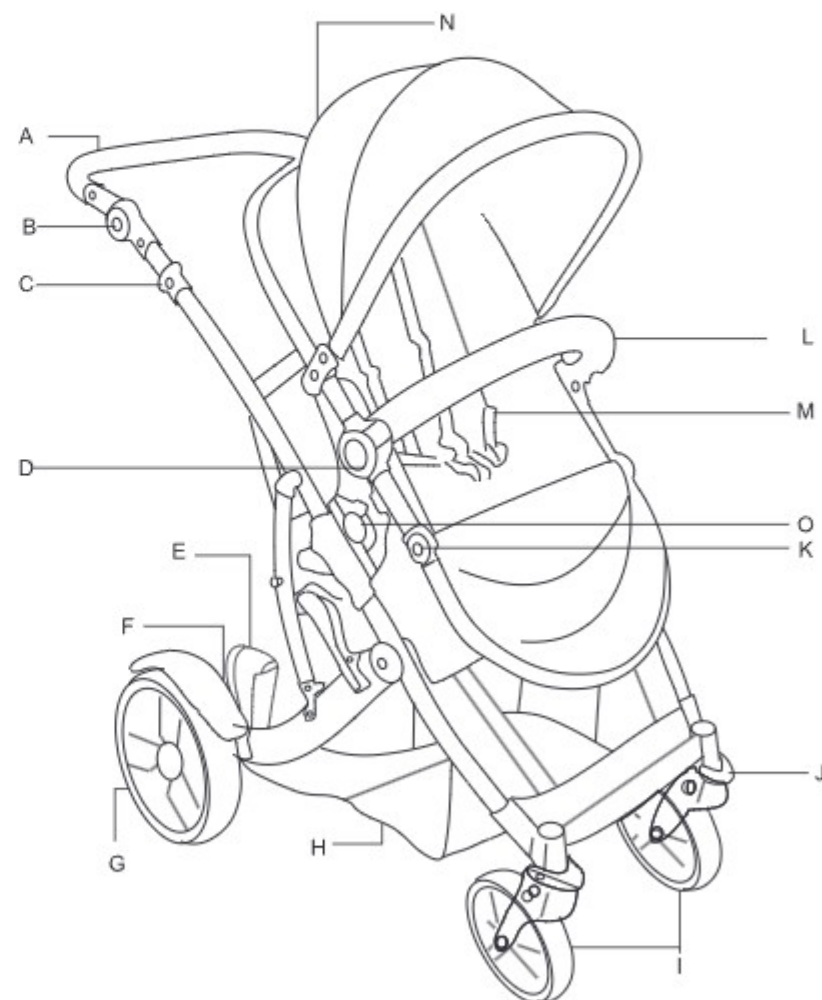

ASSEMBLY>>

Unfold the stroller chassis



1. Lift chassis lock lever and open the frame.
 2. Lift handle until frame locks into upright position as shown.
- See picture A&B

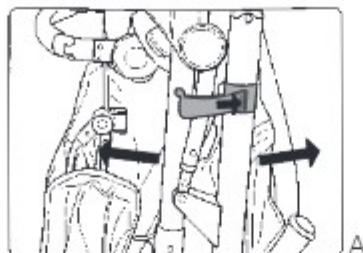

Attach the front wheels

1. Slide mounting pins into the housing on the bottom, front wheel housing until they lock into place.
2. To remove the front wheels, push the release button, located on the top of the front wheel housing. Then slide the front wheel out.


ATTENTION: make sure the wheels are properly attached by lightly tugging on the wheel.
See picture C

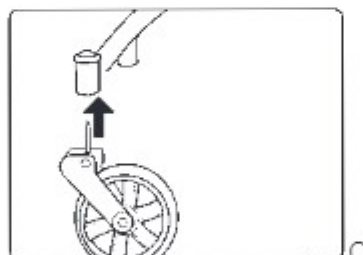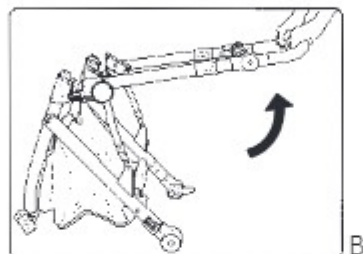

Attach the rear wheels

1. Line up the wheel axle with the rear wheel housing, and slide it in all the way. Make sure the wheel is locked in by trying to pull the wheel out slightly.
2. To remove the Rear wheels, pull the silver release tab (which is on the inside of the rear wheel housing) down, and slide the wheel out.




PLEASE NOTE: Both the front and rear wheels should be lubricated from time to time, please use an oil based product to maintain your stroller.
See picture D

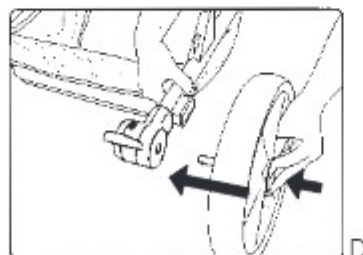

How to convert from bassinet to stroller seat mode?

Remove the footcover and liner
Undo the buckles underneath.
Remove the straps from the small pockets,
and secure underneath the base as shown A/B/C

Reverse revert to bassinet mode.

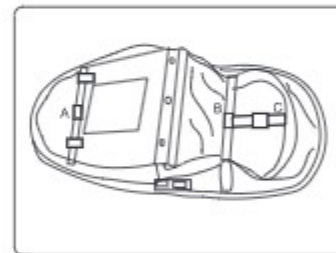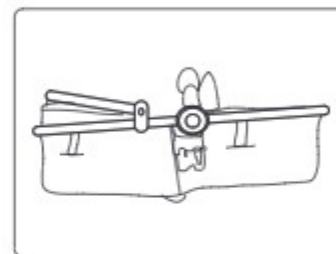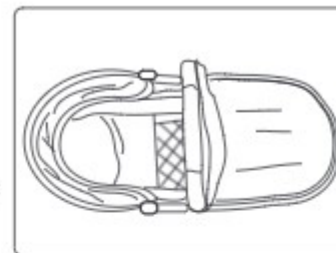

Installing car seat

Align and insert the car seat adaptors to the plastic receivers on the middle of the stroller. Slightly lift up to ensure lock tight.

To remove the car seat, pull the tabs on both sides of the car seat adaptors and lift up the car seat.



Warning: Make sure to hold the car seat firm and balance while installing or removing the car seat.



Assembly of the seat

Underneath the seat you will find a flap of fabric, with 3 snaps (see diagram), this flap needs to be wrapped around the metal bar, and snapped to the corresponding buttons on the seat fabric (see diagram).

Please make sure to attach the second seat onto the chassis and press the seat unit down to stretch the fabric cover before you button it...

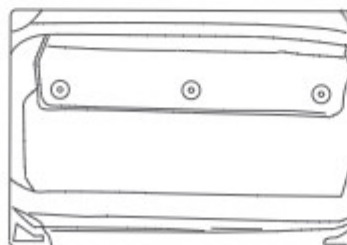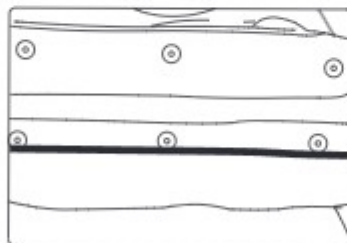

Attach the bumper bar


1. Attaching: Slide the pins into the mounts on the seat until they lock into place.
2. Removing: push the release button on the bottom of the mounts and pull bumper bar out

NOTE: Front bumper bar must always be used to avoid finger entrapment in the open connectors



Parking brake

1. To apply the brake, step on the brake lever, on the inside of the right rear wheel. To release the brake, lift the lever up.

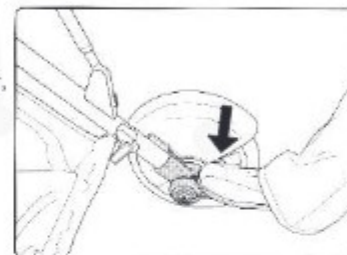

Attach the seat



1. Refer to diagram D: Pull the seat recline post upwards on both sides.
2. Now adjust the posts to a 45 degree angle towards the front of the stroller.
3. When attaching the seat, align the connectors on each side of the stroller seat above the recline posts. Once aligned, simultaneously push the connectors onto the recline posts until you hear a "click" from both sides.

NOTE: Seat attaches forward or rear facing.

▲ WARNING: Please make sure that both sides have been attached properly. Try lifting the seat off the chassis: if either side moves, you need to push down until you hear a "click".

4. Detaching the Seat: On each side of the seat, you will see on the fabric a marked circle, underneath is a lever. Lift both release levers on the seat locking latch at the same time, Lift upward.


IMPORTANT: Always remove child before detaching the seat

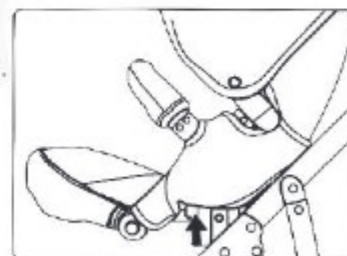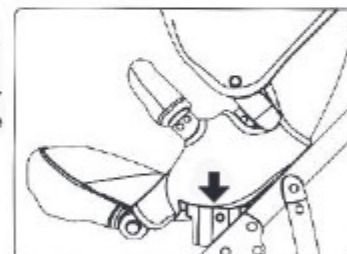

USING YOUR STROLLER >>


Folding the stroller

1. Always remove the secondary seat (if in use).
2. Always have the primary seat in the forward facing position.
3. Always apply brake and remove children before folding the stroller.
4. Push down on the secondary folding lock located just above the Release Lever on the right hand side.
5. Pull up both frame release levers located just below the stroller handle, and step back while Guiding stroller downward. Continue folding until the chassis lock engages. See picture A&B

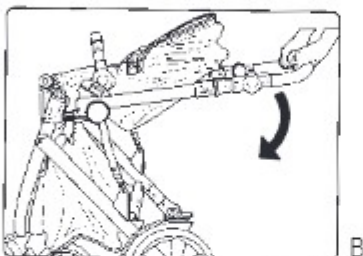


Swivel wheels

1. To make the wheels swivel or lock, lift the tab on the front of the wheel housing.

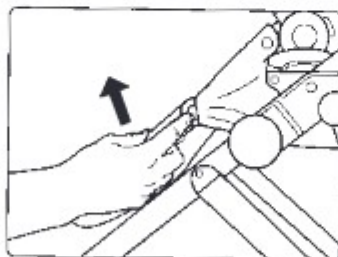

Footrest

1. Press buttons on both sides of the leg rest hinge and hold while raising or lowering the footrest to the desired position.

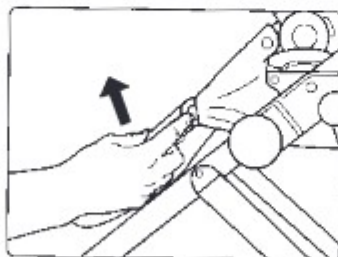


Reclining the seat

1. To recline the seat push the buttons on both sides of the stroller seat, and position the seat at the desired angle.
*Ensure the second seat(bottom seat) canopy is pushed back before reclining the top seat.
2. There are 3 positions for the seat, fully reclined, fully upright, and a middle position.


Handle adjustment

1. Press and hold the two release buttons on the outside of the handle assembly while raising or lowering the handle to the desired position.

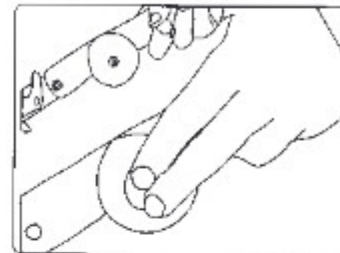

Using the safety harness

The LUNAR Stroller is equipped with a 5-point adjustable harness system. The shoulder harness is adjustable in height and can be changed by unthreading the strap from its current position and rethreading it through the shoulder belt positioning loop at the desired height. The length of the shoulder straps can also be changed by sliding the buckle on each shoulder strap. The waist belts are adjustable on either the right or left by using the adjustment buckles on the waist strap.

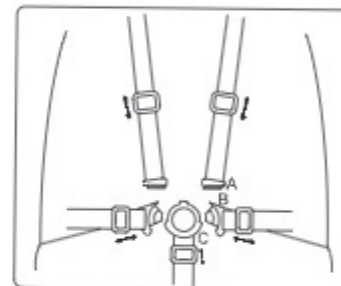

To use the 5-point harness, insert the 2 waist strap tongues(A+B) into the center crotch strap buckle(C) from the right and left. To release the harness, press the center button of the crotch strap buckle. The shoulder straps do not need to be detached each time the child is removed or seated in the stroller.

▲WARNING: Always fasten the 5-point harness securely and properly around the child's body whenever the child is seated in the stroller.

▲WARNING: Never leave the child unattended when seated in the stroller