

# Chelino

PLATINUM



## RANGER II

---

CHELINOBABY GROUP OF COMPANIES,  
NO. 12 KIMBERLITE ROAD, THETA EXT 5, BOOYSENS RESERVE, JHB,2091.SA.  
Tel: +2711 8352520

[www.chelinobaby.co.za](http://www.chelinobaby.co.za)



Thank you for choosing Chelino Platinum. Read the instruction manual carefully before using and keep the manual well for future reference. This stroller conforms to EN1888:2012

Fail to follow all warnings and instructions may cause serious injury or even death.

For your child's safety, it is crucial to read the labels and owner's manual before using the product.

**WARNING:** A child's safety is your responsibility.

**WARNING:** ensure that all locking devices are engaged before use.

**WARNING:** Children should be harnessed in at all times. Always use the crotch strap in combination with the waist belt.

**WARNING:** DO NOT hang shopping bags from the handle as this may affect the stroller's stability. Use the basket provided- maximum weight 2kgs.

**WARNING:** This product is not suitable for running or skating. Never run or skate with your stroller, especially cross roads.

**WARNING:** This product is not suitable for running or skating. Never run or skate with your stroller, especially cross roads.

**WARNING:** Never leave your child unattended.

**WARNING:** Do not use this product as a bed, your child may become tangled in straps and suffocate.

**WARNING:** The child should be clear of moving parts while making adjustments or opening or folding the stroller, Risk of serious injury (entrapment, laceration or amputation) exist.

- This stroller requires regular maintenance by the user.
- Overloading, incorrect folding and the use of non approved accessories may cause damage or break the stroller.
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks ,rain covers, etc, other than those approved by the manufacturer or distributor.
- Always balance the weight of the stroller evenly.
- We advise that your stroller is not stored or left outside at any time.
- This stroller is intended to carry one child from birth up to 15kgs.

Designed by Chelino Baby for Chelino Platinum.

For customer care please contact

Info @chelinoplatinum.co.za

## Parts list

---

1



2



3



4



5



6



7



8



9



1. Stroller frame

2. Canopy

3. Seat

4. Front bumper

5. Front wheel

6. Rear wheel

7. Foot cover

8. Car seat adapter

9. Infant car seat

## How to unfold the stroller

---



FIG.1

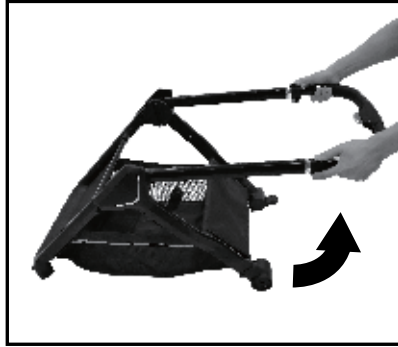


FIG.2

1. Lift classis lock lever and open the frame.(FIG.1)
2. Lift handle until frame locks into upright position as shown.( FIG.2)

## How to attach the front wheels

---



FIG.3



FIG.4

Slide mounting pins, into the housing on the bottom, front wheel housing until they lock into place.(FIG.3 &4)

**ATTENTION:** make sure the wheels are properly attached by lightly tugging on the wheel.

## How to attach the rear wheels

---

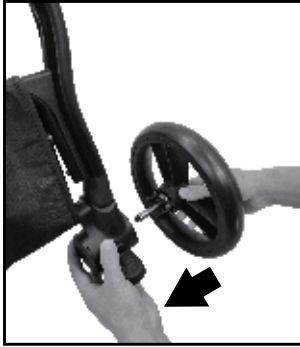


FIG.5



FIG.6

Line up the wheel axle with the rear wheel housing, and slide it on all the way. Make sure the wheels is locked in by trying to pull the wheel out slightly. (FIG.5&FIG.6)

**PLEASE NOTE:** Both the front and rear wheels should be lubricated from time to time, please use an oil based product to maintain your stroller.

## How to extend the handle bar

---


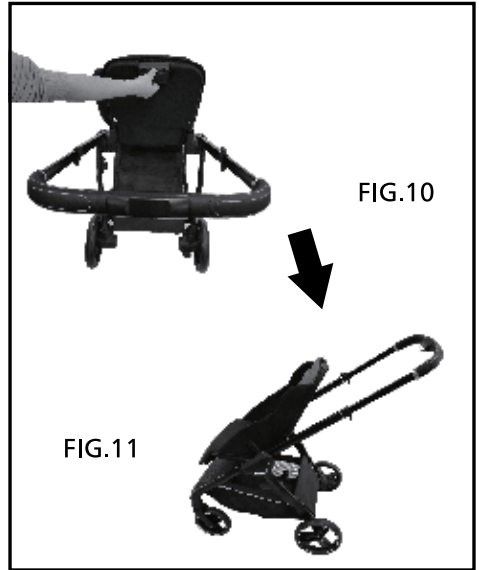


FIG.7

Press the plastic and pull the handle upwards. then the frame is fully opened. (FIG.7)

## How to attach the seat

---

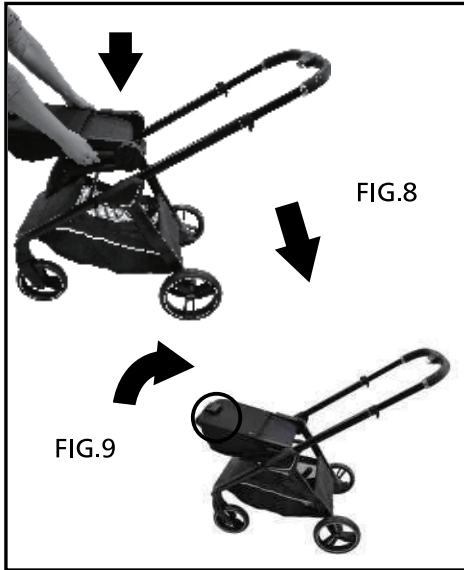

Put the seat on the frame, press plastic located on the top of center then pull up the backrest to open the seat.(FIG.8&9&10&11)

## How to attach the canopy

---



FIG.12

Insert the canopy to the stroller frame for both sides. Make sure the canopy is fully locked and test the canopy by lifting up.(FIG.12)

## How to operate rear wheels brake

---

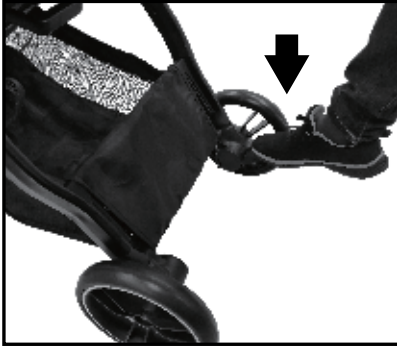


FIG.13

Always apply BOTH BRAKES whenever the stroller is stationary.

Never leave your child unattended. Never leave the stroller on a sloped surface with a child in seat, even with the brakes applied.

To apply the brake, press the rear brake pedal down firmly.(FIG.13)

Test the brake is engaged correctly by trying to push the stroller forwards for a short distance.



FIG.14

To release the brake, lift the brake pedal to unlock the rear wheels.(FIG.14)

**WARNING:** Always apply brake before loading or unloading a child.

## How to attach the rear wheels

---



FIG.15



FIG.16



FIG.17

To release the safety buckle, press the button in the center of the buckle and pull the belt to open.(FIG.15)

To apply the safety buckle, insert the two latches into the buckle on both sides until they click for locking.(FIG.16&FIG17)

Pull the belts up and down to adjust the belts. Carefully adjusted on each side so the harness fits your child comfortably.



## How to operate the front bumper

---



FIG.18

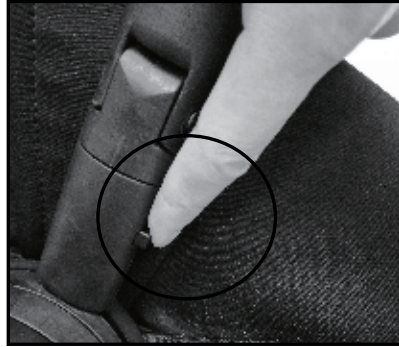


FIG.19

To apply the front bumper, click the front bumper into the plastic housing on both side and make sure it is fixed into the right position.(FIG.18)

To remove the front bumper, press the buttons located at the bottom sides of the bumper bar and pull it out.(FIG.19)

## How to operate the seat unit.

---



FIG.20

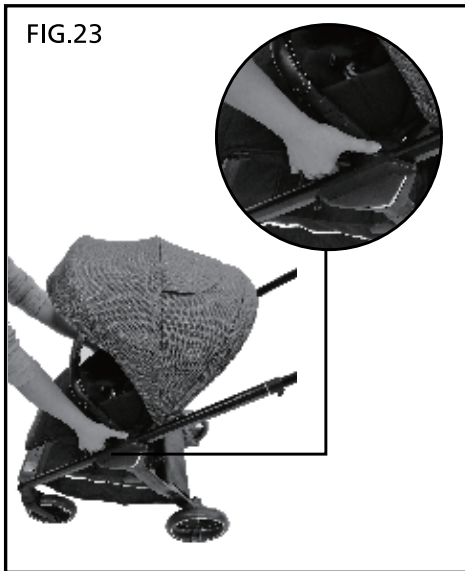


FIG.21



FIG.22

To adjust the seat recline position, pull the plastic outward and adjust the seat to the desired position.(FIG.20&21&22)



To reverse the seat, press the button on both side of the seat to release the seat unit. Lift the seat from forward facing/rearward facing to rearward facing/forward facing and put the seat on the stroller frame until hear a click sounds. Always ensure the seat unit is fully connected before using the stroller.(FIG.23&24&25)

## How to operate front wheels

---



FIG.26



FIG.27

To lock and fixed the wheel direction, push down the locking button.(FIG.26)

To unlock and use swivel wheels, lift up the locking button.(FIG.27)

## How to remove the wheels

---

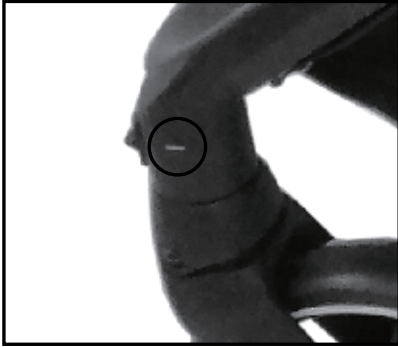


FIG.28

To remove the front wheels, press the release button on the side of the wheel housing and pull down the front wheels.(FIG.28)

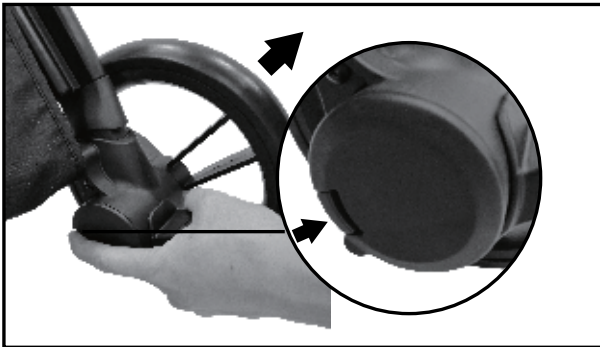


FIG.29

To remove the rear wheels, press the release button on the outside of the rear wheel housing and pull outward the rear wheels.(FIG.29)

## How to remove the canopy

---

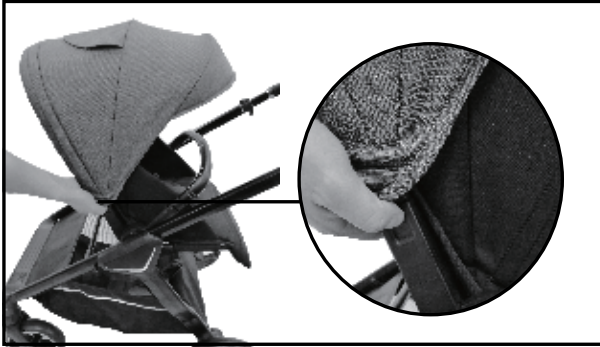


FIG.30

Press this plastic on both sides of the canopy and pull up the canopy.(FIG.30)

## How to operate the footrest

---

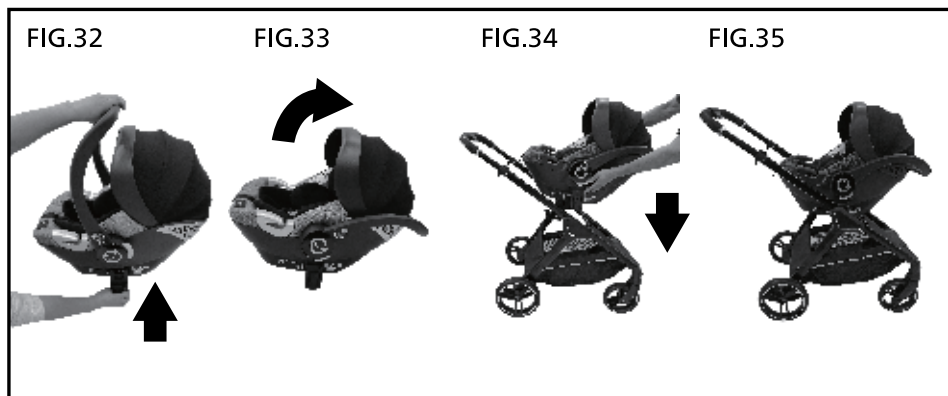


FIG.31

Press the adjustment plastic located at the center bottom footrest and adjust it to the desired position.(FIG.31)

## How to attach the car seat adapter and car seat


---



Follow the steps as below picture shown. ( FIG.32&33&34&35 )

## How to remove the car seat & car seat adapter

---

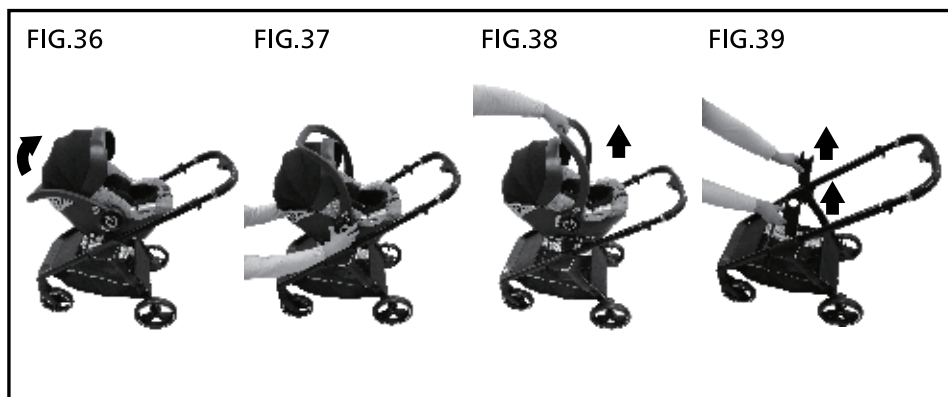

Follow the steps as below picture shown. ( FIG.36&37&38&39 )

## How to fold stroller


---

**WARNING!** When closing the stroller, ensure that your child, or other children are kept at a safe distance. Ensure that during these operations the moveable parts of the stroller do not come into contact with your child. Before closing the stroller, ensure that the storage basket is empty.




FIG.40


Press the plastic mechanism and push down the handle bar.(FIG.40)

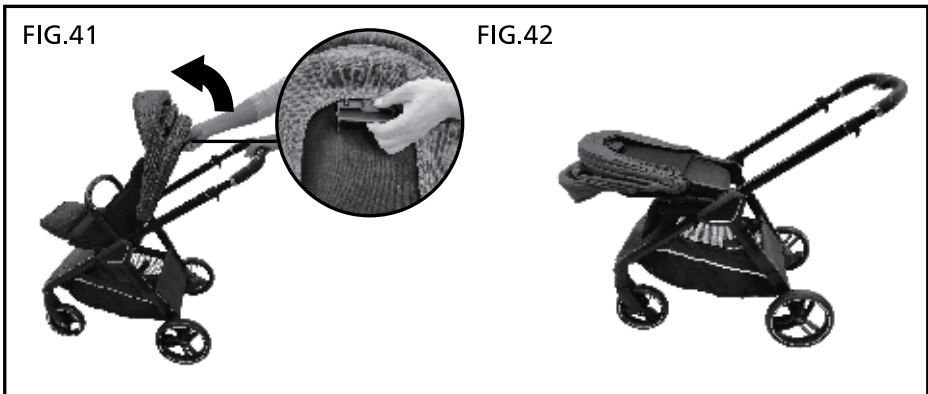

Slide the 2nd safety lock on the adjustment plastic and then pull outward the button part to fold the stroller seat.(FIG.41&42)

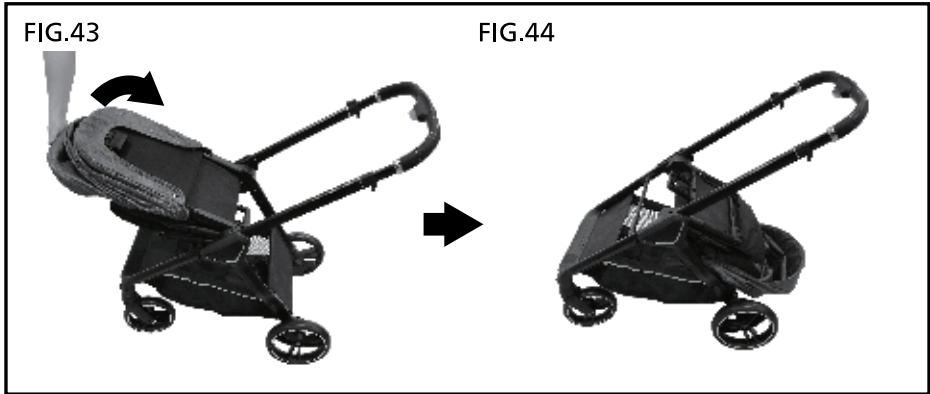

Lift the front seat up and swivel to backwards.(FIG.43&44)

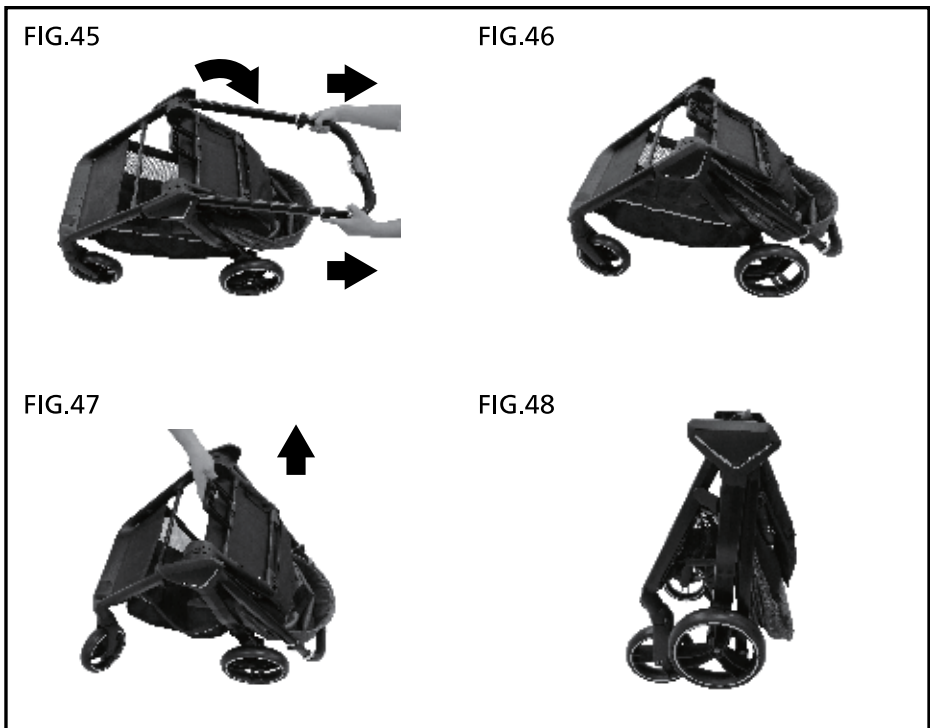

Pull the folding levers on both sides of the handle bar and push down the handle bar to fold the stroller.(FIG.45&46&47&48)

## Care and Maintenance

---

The cleaning and maintenance of this product must be carried out on a regular basis by the user.

The cleaning and maintenance of the stroller must only be carried out by an adult.

## Cleaning

---

Clean the fabric parts with a damp sponge and neutral detergent. Please refer to the product's care label.

Routinely wipe clean plastic parts with a soft damp cloth.

Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.



## Dimension Info

---



---


|                        |                 |                                 |                |
|------------------------|-----------------|---------------------------------|----------------|
| <b>STROLLER LENGTH</b> | <b>111.5 CM</b> | <b>STROLLER FOLDABLE LENGTH</b> | <b>35 CM</b>   |
| <b>STROLLER WIDTH</b>  | <b>55.5 CM</b>  | <b>STROLLER FOLDABLE WIDTH</b>  | <b>55.5 CM</b> |
| <b>STROLLER HEIGHT</b> | <b>104.5 CM</b> | <b>STROLLER FOLDABLE HEIGHT</b> | <b>71.5 CM</b> |

---

|                        |                  |
|------------------------|------------------|
| <b>STROLLER WEIGHT</b> | <b>10.86 KGS</b> |
|------------------------|------------------|

# Dimension Info

---

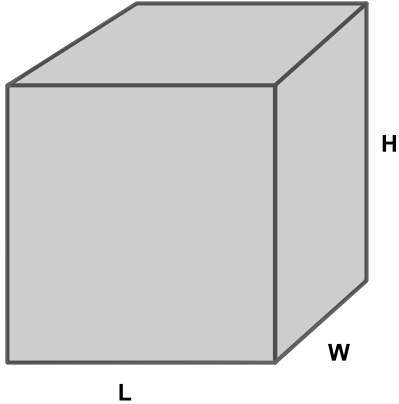

---

**CAR SEAT LENGTH**                      **56 CM**

**CAR SEAT WIDTH**                      **41 CM**

**CAR SEAT HEIGHT**                      **58 CM**

**CARTON LENGTH**                      **71 CM**

**CARTON WIDTH**                      **51 CM**

**CARTON HEIGHT**                      **60 CM**

---

**CAR SEAT WEIGHT**                      **4.8 KGS**

# Note

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# ChelinoBaby®

Stores: ChelinoBaby – Ormonde – JHB  
ChelinoBaby – Fourways – JHB  
ChelinoBaby – Woodmead Square – JHB  
ChelinoBaby – Greenstone – JHB  
ChelinoBaby – Menlyn – Pretoria  
ChelinoBaby – Kolonnade – Pretoria  
ChelinoBaby – Centurion – Pretoria  
ChelinoBaby – Gateway – Durban  
ChelinoBaby – Online – [www.chelinobaby.co.za](http://www.chelinobaby.co.za)

Imported for :  
Sky Dream Baby Ltd. co.  
No.10 (Chelino Store),  
Bahar-e-jonoobi Street,  
Inqlab Street, Tehran, Iran  
0098-21-8830-5695  
[www.chelinobaby.ir](http://www.chelinobaby.ir)



Imported for :  
ChelinoBaby Group of Companies.  
No. 12 Kimberlite Road , Theta Ext 5 ,  
Booyens Reserve , JHB , 2091. SA.  
Tel: +2711 8352520  
Info:[info@chelinoplatinum.co.za](mailto:info@chelinoplatinum.co.za)

